





Note:

Band B: 5733.5752.5771.5790.5809.5828.5847.5866MHz

If you want use the Band B, please do as follows:

1. BX pin---paste on the 1K resistor
2. S pin---- please keeping blank

Band A : 5865.5845.5825.5805.5785.5765.5745.5725MHz

If you want use the Band A, please do as let the BX and S pin paste on the 1k resistor both.

Channel selection		Channel pin (3:1)							
S	BX	000	001	010	011	100	101	110	111
0(1K resistor)	0(1K resistor)	5865M	5845M	5825M	5805M	5785M	5765M	5745M	5725M
1(NC)	01K resistor	5733M	5752M	5771M	5790M	5809M	5828M	5847M	5866M
1(NC)	1(NC)	5705M	5685M	5665M	5645M	5885M	5905M	5925M	5945M